


Quick Start Renesas Starter Kit for RX111

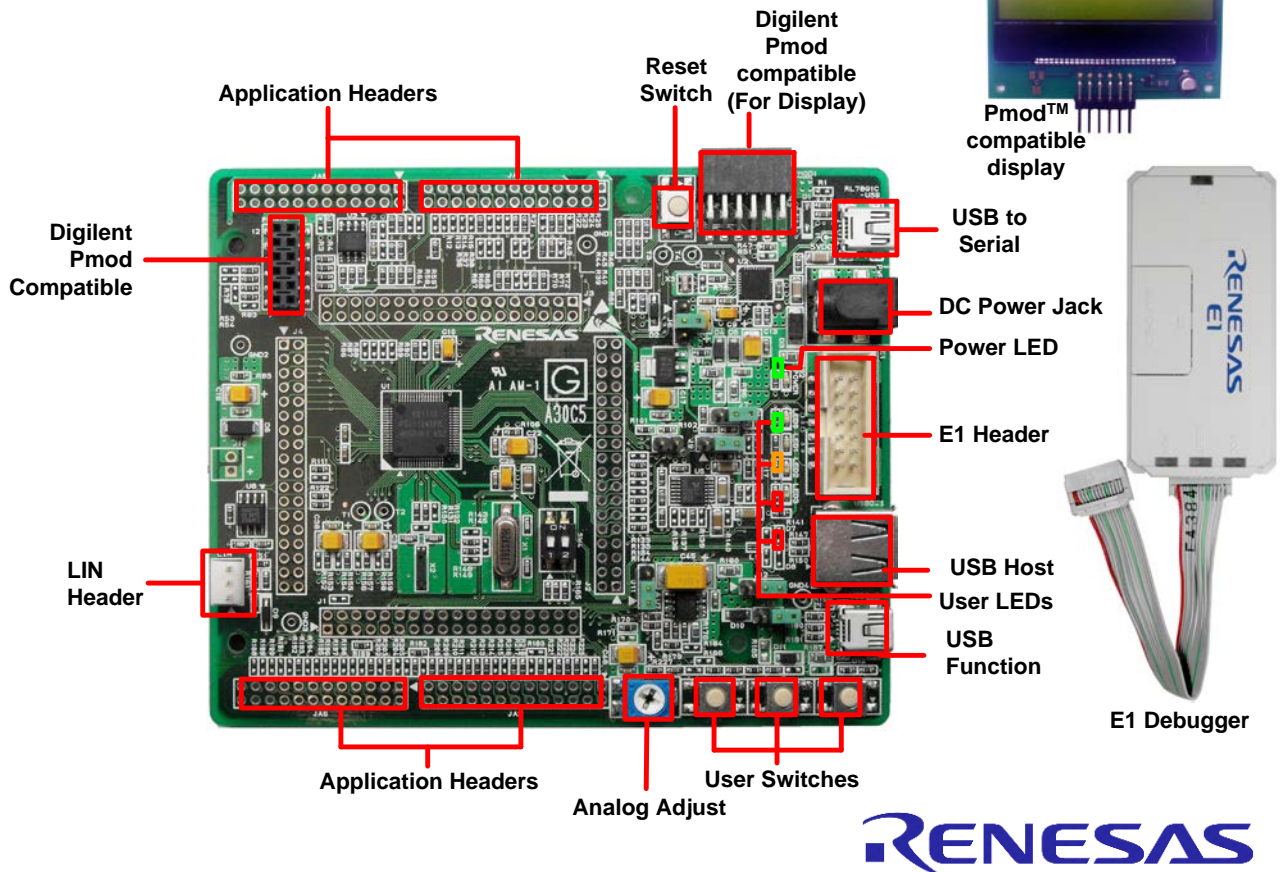

NOTE: This Quick Start Guide covers installation of the e² studio DVD.

1. Installation

Do not connect the E1 debugger module until the software support has been installed.

1. Insert the DVD into your computer's DVD-ROM drive. The DVD should automatically run the installation program. If the installer does not start, browse to the DVD root folder and double click on 'setup.exe'.
2. Windows™ 7 / Vista users may see "User Account Control" dialog box. If applicable, enter the administrator password and click 'Yes'.
3. The installer welcome screen will open. Follow the on-screen instructions to install the RSK software. This process will take several minutes.

Note:

When prompted to specify a different location for installing any of the tools, it is recommended that default entries are accepted.

The Windows driver signing or Windows Security dialog boxes may be displayed. Please accept the driver to continue.

2. Connection

4. Fit the Pmod™ Display module to the connector marked 'Pmod™ Display' on the diagram. Ensure all the pins of the connector are correctly inserted in the socket.
5. Connect the E1 debugger module to the connector marked 'E1 Header' on the diagram using the ribbon cable.
6. Connect the E1 debugger module to a spare USB port of your PC. The green 'ACT' LED on the E1 debugger will flash.
7. Please follow the steps below to install the drivers. Note that administrator privileges are required to install the drivers.

Windows™ XP

- a. Select option 'No, not this time' in the "Found New Hardware" Wizard dialog, and click the 'Next' button.
- b. Verify the "Recommended" option is selected and click 'Next'.
- c. Click 'Finish' to close the wizard.

Windows™ 7 / Vista


A "Device driver software installed successfully" pop-up will appear in the Windows toolbar and installation will complete.

8. The green 'ACT' LED on the E1 debugger will illuminate.

3. Importing Sample Code into e² studio

e² studio integrates various tools such as compiler, assembler, debugger and editor into a common graphical user interface. Start e² studio from the Start menu:

Start > All Programs > Renesas Electronics e2studio > Renesas e2studio

9. In the 'Select a workspace' folder that appears, browse a suitable location and folder name to save your new workspace. A Windows™ administrator dialog box that may appear stating that administrator privileges are required, click <Yes> to continue.
10. In the Toolchain registry dialog select Renesas Toolchains and ensure that 'RXC v1.02.01' is selected. Click 'Register'. A dialog will appear "Selected Toolchains were successfully integrated with e2studio". Click OK.
11. In the e² studio welcome screen, click the 'Go to the workbench' arrow icon, on the far right. 
12. Right-click in the project explorer window, and select 'Import'.
13. Under 'Import Source' select General > Existing Projects into Workspace, and click 'Next'.
14. Click the 'Browse' button, and locate the following root project directory:
'C:\Renesas\Workspace\RSK\RSKRX111'
15. Ensure the 'Copy projects into workspace' option is ticked and then click 'Finish'.

4. Programming and Debug


16. Left-click the Tutorial project to select it, then click the arrow next to the build button (hammer icon), and select 'HardwareDebug' from the drop down menu.



17. e2 studio will now build the project. Once this is complete, debugging can be started by clicking the arrow next to the debug button (bug icon), and selecting 'Debug Configurations...'



18. Click the arrow next to the entry 'Renesas GDB Hardware Debugging' to expand the list. Select the configuration entry 'Tutorial'.

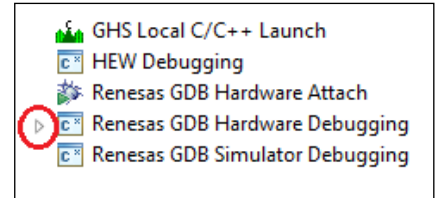

19. Click the 'Debugger' tab, then the 'Connection Settings' secondary tab. Review the settings listed in the screenshot below.


GDB Settings	Connection Settings	Debug Tool Settings
▲ Clock		
Main Clock Source	EXTAL	
Extal Frequency[MHz]	16.0000	
Permit Clock Source Change On Writing	Yes	
▲ Connection with Target Board		
Connection Type	JTag	
JTag Clock Frequency[MHz]	16.5	
Fine Baud Rate[Mbps]	2.00	
▲ Power		
Power Target From The Emulator (MAX 2)	Yes	
Supply Voltage	3.3V	
▲ CPU Operating Mode		
Register Setting	Single Chip	
Mode pin	Single-chip mode	
▲ Communication Mode		
Mode	Debug Mode	
Execute The User Program After Ending T	No	
▲ Flash		
ID Code	FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	

20. Click the 'Debug' button to download the code to the target, and begin debugging.

21. A firewall warning may be displayed for 'e2-server-gdb.exe'. Check the 'Private networks, such as my home or work network' box and click 'Allow access'.

22. A user account control dialog may be displayed. Enter the administrator password and click <Yes>.

23. e2 studio will ask you to change to the 'Renesas Debug Perspective', click 'Yes'.

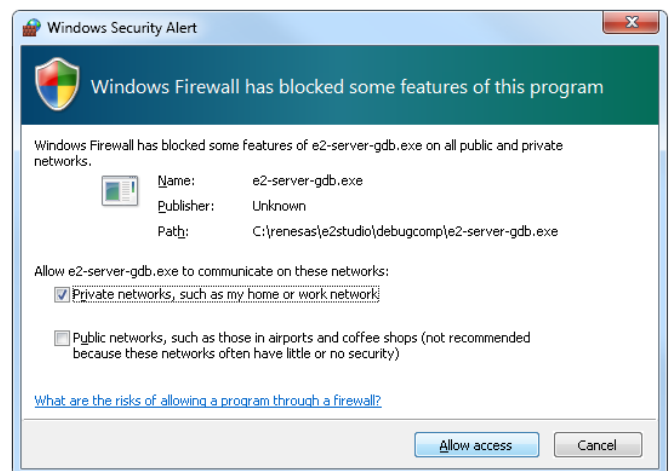

24. Once the code has been downloaded, click the 'Resume' button to run the code up to the main function. Click 'Resume' again to run the target through the rest of the code.



25. You will see the LEDs flash on the board. Pressing any of the switches on the RSK will allow you to control the rate of flashing using the Analog Adjust control.

26. Click the 'Suspend' button. The program will stop and the source code will be opened at the current program counter.



5. Next Step

After you have completed this quick start procedure, please review the tutorial code and sample code that came with the kit. You can review the other samples using the sub-projects in the Project Explorer. The Tutorial Manual will help you understand the device and the development process using Renesas Development Tools.

The Hardware Manual supplied with this RSK is current at the time of publication. Please check for any updates to the device manual or sample code from the Renesas internet site at: <http://www.renesas.com/rskrx111>

6. Renesas RX Compiler

The version of the compiler provided with this RSK is fully functional for 60days and then code size limited to 128kbytes of Code and Data. This restriction can be removed by purchasing a licenced copy of the tools.

7. User Manuals

User manuals can found in the Windows Start Menu. (Start Menu > All Programs > Renesas Electronics Tools > RSKRX111 e2studio > Manuals).

8. Support

Online technical support and information is available at: <http://www.renesas.com/rskrx111>

Technical Contact Details

America: techsupport.america@renesas.com

Europe: <http://www.renesas.eu/ibg-kitsupport>

Japan: csc@renesas.com

Note on Autoupdate: The Autoupdater is configured to automatically add itself to the Startup folder in the Windows Start Menu and use the registry defaults for access to the web. After restarting the machine the icon will appear in the System Tray next to the clock. To change the settings or access Autoupdate, simply right-click on the icon and use the menu that appears.

© 2013 Renesas Electronics Europe Limited. All rights reserved

© 2013 Renesas Electronics Corporation. All rights reserved.

© 2013 Renesas Solutions Corp. All rights reserved.

Website: <http://www.renesas.com>